

Power

Cordex™ 4.4kW

Modular Switched Mode Rectifier



CXRF 125-4.4kW

- Available in 35A @ 125VDC or 20A @ 220VDC
- High power density, over 26kW per 23" shelf
- Power limiting and wide range AC input
- 92% efficiency and power factor correction
- Hot swappable, 4RU ultra compact design

Cordex rectifiers bring advanced technology to the DC power industry. Innovative engineering combines the best in efficiency and reliability meeting the power requirements for a variety of system applications. This rectifier is specifically designed to recharge all types of stationary batteries for large utility, petrochemical, and industrial uses.

The fan cooled Cordex 4.4kW rectifier has extremely high density providing the most power in the least amount of space. A compact 4RU shelf accommodates six rectifiers per 23" shelf and five rectifiers per 19" shelf.

Local and remote setup, adjustment, and control is a simple single-step process with the Cordex CXC System Controller. By utilizing TCP/IP technology, complete configuration and monitoring of power equipment is possible through a Windows Internet Explorer browser.

Cordex 4.4kW Modular Switched Mode Rectifier

Rectifier Module(s)

Electrical

Input voltage	
Nominal:	208 to 240VAC
Operating:	187 to 312VAC
Extended:	187 to 90VAC (derated)
Input frequency:	45 to 70Hz
Power:	4400W continuous/module
Power factor:	>0.99 (50 to 100% load)
THD:	<5%
Efficiency:	>92%
Output voltage	
125V Module:	90 to 160VDC
220V Module:	180 to 320VDC
Output current	
125VDC Module:	35A @ 125VDC, 40A @ 110VDC
220VDC Module:	20A @ 220VDC
Load regulation:	Static $\pm 0.5\%$
Line regulation:	Static $\pm 0.1\%$
Transient response:	$\pm 5\%$ for 40 to 90% load step, 30ms recovery time
Wide band noise:	220VDC module: <30mVrms <300mVp-p 125VDC module: <90mVrms <700mVp-p
Insulation:	2.5kVAC Input-Earth 3kVAC Input-Output 2kVAC Output-Earth 0.5kVAC Signals-Earth
Acoustic:	<60dBa @ 1m (3ft)

Mechanical

Dimensions	
mm:	160H x 87W x 300D
inches:	6.3H x 3.4W x 11.8D
Weight:	4.65kg (10.57lb)

Features

Indicators:	AC mains OK—green LED Module OK—green LED Module fail—red LED CAN interface to CXC Controller
Controls:	
Adjustments: (via CXC Controller)	Float voltage Equalize voltage High voltage alarm Low voltage alarm High voltage shutdown Current limit Slope Start delay
Protection:	Current limit/short circuit Start delay Input/output fuses Output high voltage shutdown Power limiting Thermal foldback/shutdown Input transient AC low line foldback shutdown



Typical 26.4kW Shelf

Environmental

Temperature	
Standard:	-40 to 50°C (-40 to 130°F)
Extended:	-40 to 75°C (-40 to 167°F)
Storage:	-40 to 85°C (-40 to 185°F)
Humidity:	0 to 95% RH non-condensing
Elevation:	-500 to 2800m (-1640 to 9186ft)
Heat dissipation:	<1080 BTU per hour

Shelves

Mechanical

19"/23" shelf

Dimensions	
mm:	177H x 442W x 389D
inches:	6.9H x 17.4W x 15.3D
Weight:	8.5kg (19lb)
Mounting:	Fits 19" rack flush/center mount Fits 23" rack center mount only

23" shelf

Dimensions	
mm:	177H x 530W x 389D
inches:	6.9H x 20.8W x 15.3D
Weight:	9.5kg (21lb)
Mounting:	Fits 23" racks only flush/center mount

Connections

Input:	Box type terminal block 6 to 16mm ² (10 to 6AWG)
Output:	Bus adapters with 3/8" studs on 1" centers
Chassis ground:	Compression lug 6 to 16mm ² (10 to 6AWG)
CAN communication:	RJ12 offset

Standards

The Cordex 4.4kW is designed to meet the following:

Safety:	CSA C22.2 No 60950-1-03 UL 60950-1 1 st Edition CE marked IEC/EN 60950-1
EMC:	
Emissions:	CFR47 (FCC) Part 15 Class A ICES-03 Class A EN55022 (CISPR 22) Class A C-tick (Australia) EN 61000-3-2 EN 61000-3-3
Immunity:	EN 61000-4-2 EN 61000-4-3 EN 61000-4-4 EN 61000-4-5 EN 61000-4-6 EN 61000-4-11 ANSI/IEEE C62.41 Cat B3

For more information visit www.argusdcpower.com

Argus Technologies

Canada
United States

Burnaby, British Columbia Tel: 604 436 5900 Fax: 604 436 1233
Bellingham, Washington Tel: 360 647 2360 Fax: 360 671 4936

#048-635-10 (02/2007)

Argus Technologies reserves the right to make changes to the products and information contained in this document without notice.

Copyright © 2007 Argus Technologies. All Rights Reserved. Argus® is a registered trademark of Argus Technologies. member of The Alpha Group™ is a trademark of Alpha Technologies. Cordex™ is a trademark of Argus Technologies.

Cordex 220-4.4kW Modular Switched Mode Rectifier

010-588-B2

The following documents and drawings are included in this manual to provide the necessary information required for installation, operation and fault diagnosis of the unit:

- **Specifications, Cordex 220-4.4kW:** 010-588-B1 Rev A
- **Warranty Policy:** 048-507-10
- **CSA/NRTL Equivalence:** 048-554-10
- **Installation and Operation Instructions:** 010-588-C0 Rev A
- **Outline Drawing, 19" Shelf:** 030-768-06
- **Customer Connections, 19" Shelf:** 030-768-08
- **Spare Parts List:** 010-588-G0
- **Factory Service Information:** 048-527-10

MANUAL ADDENDUM

Unit Description: Cordex 220-4.4kW Modular Switched Mode Rectifier
Manual P/N: 010-588-B2 Applies to Manual Revision: A

#	Date	Page#	Line#	Correction to be implemented
1	07-11-20	7 of 010-588-C0	37	Add text to Section 5.5: WARNING Use care when removing or replacing the covers for the AC input connections. Never assume that an electrical connection or conductor is not energized.

MANUAL ADDENDUM

Specifications for Argus' Switched Mode Rectifier Cordex 220-4.4kW

Power Module Output

Voltage:	180 to 320Vdc within rated limits
Current:	20A @ 220Vdc nominal
Maximum Power:	4400W continuous/module
Static Load Regulation:	Better than $\pm 0.5\%$ for any load change within rated limits
Dynamic Load Regulation:	Better than $\pm 5\%$ for 40% - 90 - 40% step load change at nominal output voltage (output shall recover to static limits within 30ms)
Static Line Regulation:	Better than $\pm 0.1\%$ for any change in input voltage within rated limits
Dynamic Line Regulation:	Better than $\pm 1\%$ for any change in input voltage within rated limits (output shall recover to static limits within 10ms)
Hold-up Time:	>10ms
Time Stability:	$\leq 0.5\%$ per year
Temperature Stability:	<100ppm/ $^{\circ}\text{C}$ over the operating range
Heat Dissipation:	<1080 BTU per hour
Electrical Noise:	<30mVrms 10kHz to 10MHz (wideband) <300mVp-p 10kHz to 100MHz
Acoustic Noise:	<55dBa @ 1m (3ft.) A weighted @ 30 $^{\circ}\text{C}$ (86 $^{\circ}\text{F}$) [five modules in a shelf]
EMI:	The unit meets requirements of EN55022 (see Standards for more EMC)

In accordance with FCC requirements, we provide the following statement as specified in the FCC guidelines for conformance to Part 15, Class A:

NOTE: *This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.*

Any changes or modifications to this equipment not expressly described in this manual could void the FCC compliance.

Specifications for Argus' Switched Mode Rectifier Cordex 220-4.4kW Continued

Power Module Input

Voltage:	208 to 240Vac nominal
Extended Operation:	Low: 187 to 90Vac (power de-rated linearly to 40% output) High: 265 to 312Vac (de-rated power factor)
Frequency:	50/60Hz nominal (45 to 70Hz)
Current:	20A @ 240Vac 23A @ 208Vac 26A @ 187Vac (maximum)
Recommended Feeder Breaker:	30A
Power Factor:	>0.99 at nominal conditions and 50-100% load
Protection:	10kA-interrupting capacity fuses in active and neutral lines
Efficiency:	>92% at nominal conditions and 50-100% load
Inrush Current:	≤ full load steady state current of the rectifier within rated limits
Start-up Ready Time:	<5 seconds (excluding soft start) to complete inrush limit routine and ac measurement (for OK signal)
Start-up Delay:	Programmable up to 120 seconds to enable stagger-start of multiple rectifiers and to minimize the effect on a supply source
Soft Start:	User adjustable to at least 5 seconds (not including start-up delay time) and is determined by output current limit ramp-up
T.H.D. (Current):	<5% at 100% load
Input Transient Suppression:	Meets ANSI/IEEE C62.41 Category B3
Input Leakage Current:	<3.5mA @ 265Vac 60Hz

Environmental

Operating Temperature:	-40 to +75°C, power derated above 50°C (122°F) (-40 to 167°F)
Storage Temperature:	-40 to +85°C (-40 to 185°F)
Humidity:	0 to 95% non-condensing
Elevation:	-500m to 2800m; to 4000m with temperature derated to 40°C (-1640 feet to 9186 feet; to 13124 feet with temperature derated to 104°F)

Miscellaneous

MTBF:	>350,000 hours ground benign @ 30°C (86°F)
-------	--

Specifications for Argus' Switched Mode Rectifier Cordex 220-4.4kW Continued

Mechanical

Module	
Dimensions:	160mm H x 87mm W x 300mm D [6.3" H x 3.4" W x 11.8" D]
Weight:	4.65 kg (10.25 lb.)
19" Shelf (fits 5 modules)	
Dimensions:	177mm H x 442mm W x 389mm D [7" H x 17.4" W x 15.3" D]
Weight:	8.5 kg (18.7 lb.)
Mounting:	Fits 19" rack flush mount Optional 19" or 23" mid-mount brackets

Connections

Input:	Box type terminal block, 6 to 16mm ² (#10 to #6AWG)
Output:	Bus adapters with 3/8" studs on 1" centers
Chassis Ground:	Compression lug, 6 to 16mm ² (#10 to #6AWG)
CAN Communication:	RJ-12 offset

Safety

EN	60950
UL	60950-1: 2002
CSA	C22.2 No. 60950-1-03
CE	EN 60950, CB Scheme
Telcordia (Bellcore)	GR-1089-CORE (requirements applicable to rectifier)

Other Referenced Standards

EN 55022 (CISPR 22)	Information Technology Equipment – Radio Disturbance Characteristics – Limits and Methods of Measurement
EN 61000-3-2	Harmonic Current Emissions
EN 61000-3-3	Voltage Fluctuations and Flicker
EN 61000-4-2	ESD Immunity
EN 61000-4-3	Radiated Electromagnetic Immunity
EN 61000-4-4	Electrical Fast Transient (EFT)/Burst Immunity
EN 61000-4-5	Power Line Surge Immunity
EN 61000-4-6	Conducted Electromagnetic Immunity
EN 61000-4-11	Voltage Dips, Short Interruptions and Variations
ETS 300 019-1-1	Environmental Conditions; Storage
ETS 300 019-1-2	Environmental Conditions; Transportation
ETS 300 753	Acoustic Noise Emissions
IEC 60950	Safety of Information Technology Equipment, Including Electrical Business Equipment (UL/CSA 60950)

The above information is valid at the time of publication. Consult factory for up-to-date ordering information. Specifications are subject to change without notice.

WARRANTY AND REPAIR INFORMATION

Warranty Policy

Argus Technologies Ltd. warrants all equipment manufactured by it to be free from defects in parts and labor, excluding third party OEM materials (example: air conditioners, batteries), for a period of two years from the date of shipment from the factory. For third party products the OEM's warranty shall apply. The liability of Argus applies solely to repairing, replacing or issuing credit (at Argus' sole discretion) for any equipment manufactured by it and returned by the customer during the warranty period. The terms of the warranty are Ex Works (EXW) from Argus' factory service location.

Argus reserves the right to void the warranty if:

- (1) identification marks or serial numbers are removed or altered in any way,
- (2) invoice is unpaid, or
- (3) defect is the result of misuse, neglect, improper installation, environmental conditions, non-authorized repair, alteration or accident.

Argus shall not be liable to the customer or other parties for any loss of profits, loss of use, costs for removal or installation of defective equipment, damages or consequential damages based upon equipment failure during or after the warranty period. There shall be no other obligations either expressed or implied. Argus will not honor warranties for batteries and other third party products without prior written Argus authorization.

Freight Policy

Customer is responsible for all shipping and handling charges (COD and freight collect will not be accepted without prior approval from Argus Technologies).

Terms of Payment (North America)

Payment terms are net 30 days subject to prior credit approval. All other orders require payment before shipping.

Terms of Payment (International)

Payment terms are subject to prior approval and are typically through Tele-Transfer.

Return Material Policy

Our RMA policy is designed to ensure prompt, efficient and high quality factory service. A Return Material Authorization (RMA) number must be obtained before products can be accepted for servicing by the Argus factory. For returns to an authorized service center (refer to "Authorized Service Centers" for locations), please consult the individual service center for specific return policies and instructions.

To obtain a RMA number for a factory return, customers must call the appropriate location with the product serial and model number, as well as a brief description of the problem, shipment instructions and billing details.

The original packing container should be used whenever possible. Both the shipping documents and the outside of the box must have the RMA # clearly marked and the product shipped prepaid to the Argus factory service center. Argus will endeavor to repair products within five working days of receipt. Repairs to the returned product are warranted for a period of six months. A service charge may be applied if no fault is found in the returned product. Argus will not accept products without an RMA number.

Business Hours

Argus North American office hours are 7:30 am to 5:00 pm (Pacific Standard Time) Monday to Friday.

Factory Service Centers

Canada and International

Argus Technologies Ltd.
ATTN: RMA Returns
7033 Antrim Avenue
Burnaby, BC, V5J 4M5 Canada
Tel: +1 604 436 5900
Fax: +1 604 436 1233
Email: returns@argusdcpower.com

USA

Argus Technologies Inc.
ATTN: RMA Returns
3116 Mercer Avenue
Bellingham, WA, 98225 USA
Tel: +1-360 756 4904
Fax: +1-360 647 0498
Email: returns-usa@argusdcpower.com

Asia-Pacific

PCM Electronics (Dong Guan) Co., Ltd.
Hongli Industrial Area, Miaobian, Liaobu Town,
Dongguan City, Guangdong Province,
523400 China
Tel: +86 755 8895 3310
Fax: +86 755 8895 3307

Authorized Service Center

Argentina

Argus Technologies de Argentina
Belen 315, Capital Federal, Buenos Aires,
14071 Argentina
Tel: +54 (11) 4672 4821
Fax: +54 (11) 4504 4698
Cell: +54 9 (11) 4993 9996
Email: lkleiman@argus.ca

Asia

Argus Technologies Asia Pte Ltd
Blk 6 Tagore Lane #160
Singapore 787570
Tel: +65 6458 8900
Fax: +65 6458 2122

Australia

CPS National
8/376 Newbridge Rd
Moorebank, NSW, 2170 Australia
Tel: +61 02 9822 8977
Fax: +61 02 9822 8077

Australia/New Zealand

Alpha Power Systems Pty Ltd
Unit 3, 30 Heathcote Road
Moorebank, NSW, 2170 Australia
Tel: +61 02 9602 8331
Fax: +61 02 9602 9180

Century Yuasa

37 - 65 Colbalt Street
Carole Park QLD 4300
Australian Sales & Service
Tel: +61 07 3361 6587
Fax: +61 07 3361 6705
New Zealand Sales & Service
Tel: +64 9 978 6689
Fax: +64 9 978 6677

Canada

Compower Systems Inc.
118 Tiffield Road
Toronto, ON, M1V 5N2 Canada
Tel: +1 416 293 3088
Fax: +1 416 293 0671

Europe

Alpha Technologies Europe Ltd.
Cartel Business Estate
Edinburgh Way
Harlow, Essex, CM20 2DU UK
Tel: +44 1279 422110
Fax: +44 1279 423355

Mexico & Central America

Technologies Argus First De Mexico SA de CV
Anatole France No. 17
Col. Polanco
Mexico City, 11560 Mexico
Tel: +52 55 5280 6990
Fax: +52 55 5280 6585

South America

Argus Technologies Argentina
Santo Tome 2573, Capital Federal
Buenos Aires, 1416 Argentina
Tel: +54 11 4504 4698
Cell: +54 9 11 4993 9996
E-pager: 541149939996@nextel.net.ar

Turkey

IPC Enerji Elk San ve TIC AS
Inonu cad. Kanarya sok. No:20
Yenisahra - Kadikoy
Istanbul, Turkey
Tel: +90 216 317 41 42
Fax: +90 216 472 90 66

CSA/NRTL — MARKS — BACKGROUND

What are the CSA and NRTL?

CSA (Canadian Standards Association also known as CSA International) was established in 1919 as an independent testing laboratory in Canada. CSA received its recognition as an NRTL (Nationally Recognized Testing Laboratory) in 1992 from OSHA (Occupational Safety and Health Administration) in the United States of America (Docket No. NRTL-2-92). This was expanded and renewed in 1997, 1999, and 2001. The specific notifications were posted on OSHA's official website as follows:

- Federal Register #: 59:40602 - 40609 [08/09/1994]
- Federal Register #: 64:60240 - 60241 [11/04/1999]
- Federal Register #: 66:35271 - 35278 [07/03/2001]

When these marks appear with the indicator "C and US" or "NRTL/C" it means that the product is certified for both the US and Canadian markets, to the applicable US and Canadian standards. (1)

Argus rectifier and power system products, bearing the aforementioned CSA marks, are certified to CSA C22.2 No. 950 and UL 1950, or CSA/UL 60950.

As part of the reciprocal, US/Canada agreement regarding testing laboratories, the Standards Council of Canada (Canada's national accreditation body) granted Underwriters Laboratories (UL) authority to certify products for sale in Canada. (2)

Only Underwriters Laboratories may grant a licence for the use of this mark, which indicates compliance with both Canadian and US requirements. (3)

What are NRTLs and what do they do?

NRTLs are third party organizations recognized by OSHA, US Department of Labor, under the NRTL program.

The testing and certifications are based on product safety standards developed by US based standards developing organizations and are often issued by the American National Standards Institute (ANSI). (4)

The NRTL determines that a product meets the requirements of an appropriate consensus-based product safety standard either by successfully testing the product itself, or by verifying that a contract laboratory has done so, and the NRTL certifies that the product meets the requirements of the product safety standard. (4)

When was the NRTL started and who governs it?

In 1983, in a suit brought on by an independent testing laboratory, OSHA was court ordered to remove specific references to UL (Underwriters Laboratories) and FMRC (Factory Mutual Research Corporation) from its regulations.

In 1988, OSHA revised its regulations to remove those references and the NRTL program was established.

The NRTL Program is both national and international in scope with foreign labs permitted.

References:

Information in this document has been developed from the official websites of the respective organizations.


- (1) www.csa-international.org
- (2) www.scc.ca
- (3) www.ulc.ca
- (4) www.osha.gov



The product on which either of these marks appear has been certified by CSA as meeting applicable Canada/US standards.



The product on which this mark appears has been certified by UL as meeting applicable Canada/US standards.

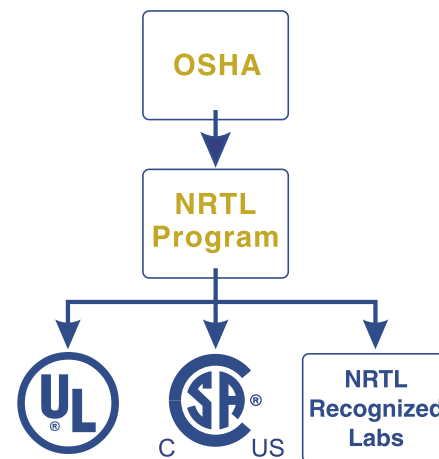

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

1. Please read this manual prior to use to become familiar with the product's numerous features and operating procedures. To obtain a maximum degree of safety, follow the sequences as outlined.
2. This manual provides warnings and special notes for the user:
 - a. Points that are vital to the proper operation of the product or the safety of the operator are indicated by the heading: **WARNING**.
 - b. A notation that is in **Bold or Italic** typeface covers points that are important to the performance or ease of use of the product.
3. Before using the product, read all instructions and cautionary markings on the product and any equipment connected to the product.
4. Do not expose the product to rain or snow; install only in a clean, dry environment.
5. **CAUTION** – Unless otherwise noted, use of an attachment not recommended or sold by the product manufacturer may result in a risk of fire, electric shock, or injury to persons.
6. **CAUTION** – Do not operate the product if it has received a sharp blow, it has been dropped, or otherwise damaged in any way – return it to a qualified service center for repair.
7. **CAUTION** – Do not disassemble the product – call our qualified service centers for servicing. Incorrect reassembling may result in a risk of electrical shock or fire.
8. **WARNING** – The output voltages of the product are hazardous. Extreme caution should be maintained when servicing or touching conductive components connected to the product's output.

This page intentionally left blank.

TABLE OF CONTENTS

1	INTRODUCTION	1
1.1	Scope of the Manual	1
1.2	Product Overview	1
1.3	Part Numbers and List Options	1
2	RECTIFIER FEATURES.....	2
2.1	Front Panel.....	2
2.2	Rear Panel	3
2.3	True Module Fail Alarm.....	3
2.4	Heat Dissipation	3
2.5	Over Temperature Protection	3
2.6	Wide AC Range	4
2.7	AC Inrush/Transient Suppression	4
2.8	Soft Start	4
2.9	Start Delay	4
2.10	Current Limit/Short Circuit Protection	4
2.11	Power Limiting.....	4
2.12	High Voltage Shutdown (HVSD)	4
2.13	Battery Eliminator Operation.....	4
3	INSPECTION.....	5
3.1	Packing Materials	5
3.2	Check for Damage	5
4	INSTALLATION	6
4.1	Safety Precautions	6
4.2	Shelf Preparation/Mounting	6
4.3	Rectifier Module Insertion/Removal	6
5	WIRING AND CONNECTIONS	7
5.1	Safety Precautions	7
5.2	Tools Required.....	7
5.3	Power System Chassis Ground and DC Ground Reference.....	7
5.4	AC Feeder Protection/Sizing.....	7
5.5	AC Input Connections	7
5.6	Calculating Output Wire Size Requirements.....	8
5.7	DC Output Connections	8
5.8	CAN Serial Ports	9
6	OPERATION.....	10
6.1	Main Rectifier States	10
6.2	Main Rectifier Modes	11
6.3	Can Bus Communications	11
6.4	Factory Ranges and Defaults	12
7	SYSTEM STARTUP	13
7.1	Check System Connections.....	13
7.2	Verify AC and Power the Shelf	13
7.3	Check Battery Polarity and Connect.....	13
7.4	CXC Reset	13

8	MAINTENANCE	14
8.1	Fan Replacement.....	14
8.2	MOV Replacement.....	15
9	ARGUS CONVENTIONS.....	16
9.1	Numbering System.....	16
9.2	Acronyms and Definitions	16

FIGURES

Figure 1	–Cordex 220-4.4kW rectifier front panel	2
Figure 2	–CAN serial ports and termination selection	9
Figure 3	–Fan replacement	14
Figure 4	–MOV replacement	15

1 Introduction

1.1 Scope of the Manual

This instruction manual explains the installation, interconnection, and operation of Argus Technologies' Cordex 220-4.4kW modular switched mode rectifiers.

NOTE: *To aid the user with installation, frequent reference is made to drawings located at the rear of the manual.*

1.2 Product Overview

A complete Cordex rectifier system consists of one or more power modules in a common shelf enclosure. The shelf has connections for AC inputs, DC output, and system communications.

Cordex rectifier modules use a high frequency, switched mode conversion technique to provide a fully regulated and isolated DC output from the AC mains. The rectifier input is wide range to allow use on 208/220/240Vac 50/60Hz electrical service.

Rectifier power modules are "hot swappable" meaning they can be inserted or removed from the shelf without cutting power to or from the system or the load.

Additional power modules can be included with the system at the time of ordering or added after the shelf has been installed.

The shelf rectifier system is designed to operate with the Argus Cordex System Controller (CXC).

The CXC allows the user to configure, monitor and control the entire DC power system from its touch screen display similar to that used in a Personal Digital Assistant (PDA). Other features of the unit include temperature compensation, auto equalization, remote access, dial out on alarm, battery diagnostics, as well as Web server and Simple Network Management Protocol (SNMP) support for configuration and monitoring.

Details of controller operation are provided in the current version software manual.

There are two external CXC models of the system controller that communicate with the shelf via offset RJ-12 shelf connectors. The CXCR is mounted in a rack and the CXCP is (factory) mounted in a panel.

See manual #018-570-B2.

1.3 Part Numbers and List Options

This product is available to order under the following part numbers and list options:

Description	Part Number/List Option
Cordex 220-4.4kW rectifier power module.....	010-588-20
Basic module.....	*List 0
Charcoal finish with white (contrasting) silkscreen	*List 56
Cordex 220-4.4kW 19" shelf, flush mounting, single phase ac input.....	030-768-20
Basic shelf, may be equipped with up to five Cordex 220-4.4kW modules**	*List 0
19" mid-mount	List 19
23" mid-mount	List 23
DC output, bus bar adapters, 16" deep.....	List 82
Kydex rear cover	List 89
Module blank.....	List 90

* Default option

** See drawings at the rear of this manual.

The above information is valid at the time of publication. Consult factory for up-to-date ordering information.

2 Rectifier Features

2.1 Front Panel

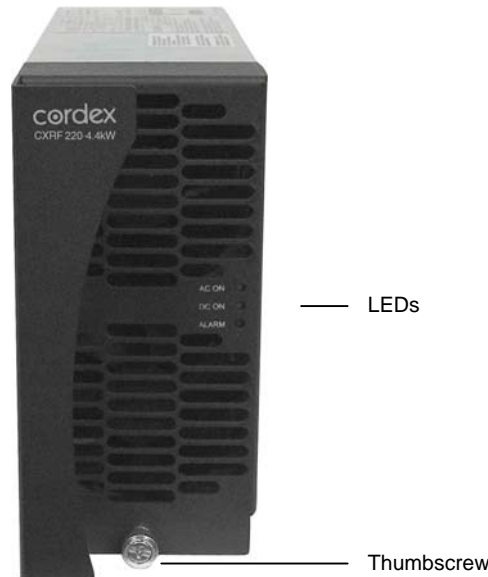


Figure 1–Cordex 220-4.4kW rectifier front panel

2.1.1 LEDs

The front panel LEDs provide:

- Rectifier status summary,
- Rectifier software upgrade in progress indication,
- Locate module pattern.

Rectifier status summary will show the rectifier alarm status, communication fail status and rectifier on/off status.

2.1.1.1 AC ON

The top LED (green) is on when AC is within valid range. The LED will flash (~2Hz) when AC is outside the nominal range – **AC voltage is invalid if the AC Mains Low or AC Mains High alarm is active**. The LED turns off when AC has failed.

2.1.1.2 DC ON

The middle LED (green) is on when the rectifier is delivering power to the load. The LED will flash when communication is lost. The LED turns off when the rectifier is off; e.g., when commanded via the CXC.

2.1.1.3 ALARM

The bottom LED (red) is on continuously in the event of an active Module Fail alarm; if the module is unable to source power as a result of any of the following conditions:

Output fuse blown	AC Mains Input Fail	Module fail (ramp test fail)
High voltage (OVP) shutdown	Thermal shutdown	Local shutdown
UPF fail	No output power	Fan (1 and 2) fail.

The LED will flash (~2Hz) when a minor alarm is detected; if the modules output capability has been reduced or a minor component failure is detected during the following conditions:

VAC meter fail	AC foldback	Remote equalize
Fan (1 or 2) fail	Low output voltage	High output voltage
Current limit (programmable option)	Power limit (programmable option)	High temperature foldback
Temperature sense fail	Soft start operation	Communications lost.

The LED remains off in the absence of an alarm. If the unit output is not connected to a battery or parallel rectifier, the LED will extinguish if no AC power is present.

2.1.1.4 LED Activity During Software Upload

When a rectifier software upload is in progress, the LEDs will behave in a distinctly different way to indicate new rectifier software is being transferred from the CXC.

When a rectifier data transfer is in progress, all three LEDs will flash in a sequence lasting 1.5 seconds. When the last LED is lit, the sequence is repeated beginning at the first LED.

2.1.1.5 LED Activity During 'Locate Module' Command from CXC

When the 'locate module' command has been received from the CXC, the LEDs will behave in another distinct fashion so that the rectifier is easier to visually identify among adjacent rectifiers.

This state is entered when commanded via the CXC. The LEDs will flash in a ping-pong pattern repeating every 2 seconds.

The ping-pong pattern lights each LED sequentially. After the last LED is lit, each LED is lit in reverse sequence. When the first LED is lit, the pattern repeats. The effect makes it appear as if the light is bouncing between the first and last LED.

2.1.2 Mechanical

A thumbscrew is provided to secure the rectifier into the shelf. During normal operation the rectifier shall be locked into position. A handle (or grip) is incorporated into the front panel to facilitate the removal of the rectifier from the shelf. No special tools are required.

2.2 Rear Panel

Located on the rear panel of the rectifier is a single connector for shelf power and communications.

2.3 True Module Fail Alarm

The power modules have a "true" fail alarm. This provides a true indication of the power module's ability to source current. When the module's output current drops below 2.5% of the rated output a low output current condition is detected and the Module Fail detection circuit is activated. This circuit momentarily ramps up the output voltage to determine if the module will source current. If no increase in current is detected, the Module Fail alarm is activated. The module will test once every 60 seconds for the condition until current is detected. Output voltage ramping will cease upon detection of current¹. A minimum 2.5% load is required to avoid the Ramp Test Fail alarm; this can typically be provided with the parallel system battery. Activation of this alarm could indicate a failed module or a failed load.

NOTE: *For Cordex rectifier systems without batteries (or with a very light load; below 2.5% of rated output) it is recommended that the ramp test be disabled to avoid nuisance alarms. The Ramp Test feature is enabled/disabled via the CXC menu item: Rectifiers, Configure Settings.*

2.4 Heat Dissipation

Each rectifier module is equipped with at least one front-mounted fan. The fan operates at temperatures above 0°C (32°F). Cooling of the module is front-to-rear with the exhaust air exiting at the back. The fan is variable speed; which is determined by heatsink temperature and load.

2.5 Over Temperature Protection

Each rectifier module is protected in the event of an excessive increase in temperature due to component failure or cooling airflow blockage. During over temperature conditions, the rectifier limits the output power as well as the output current. If temperature continues to increase, a shutdown of the rectifier is initiated. The rectifier shall restart automatically if the temperature has returned to a safe level.

¹ Under normal conditions, a battery connected to the output of the rectifier will draw current when the voltage ramp occurs. Therefore the rectifier fail alarm will not be generated with a battery connected.

2.6 Wide AC Range

A minor alarm is generated when the AC input voltage drops below specification. Rectifier output power is reduced linearly between 187Vac and 90Vac to 40% of the rated output power (the unit will deliver derated output power down to 80Vac).

At 80Vac, the module will shut down and will not restart until the AC is greater than or equal to 90Vac; however, the restart voltage depends on the load current. At reduced load current the unit may restart with the input voltage as low as 100Vac.

For voltages above 265Vac, power factor and total harmonic distortion may be derated. Up to 312Vac, the rectifier will be operational and shall not suffer any damage.

2.7 AC Inrush/Transient Suppression

The inrush current of the rectifier module is limited to the full load steady state line current to prevent surge on the AC line. Modules are also protected from input lightning and transient surges in accordance with IEEE/ANSI C62.41 Category B3.

2.8 Soft Start

To eliminate an instantaneous demand on the AC source, a soft start feature is employed. Soft Start, sometimes referred to as “current walk-in”, works by gradually (up to five seconds) ramping the current limit up from zero to the actual or defined customer setting. The rectifier output voltage is ramped up from the minimum voltage to the float voltage.

2.9 Start Delay

The rectifier modules are equipped with a delay timer in order to stagger start a series of modules to prevent excessive loading of generators upon start up. The built-in timer delays the turn on of the module depending on the value selected (up to 120 seconds) via the CXC. A minimum one-second delay is preset to allow charging of the input capacitors.

2.10 Current Limit/Short Circuit Protection

The current limit function determines the maximum output current limit of the rectifier module, regardless of output voltage or power. Maximum output current is limited to a constant value down to short circuit condition. Current limiting can be used to mate the rectifier output current ampacity to the needs of the load and parallel battery to minimize excessive battery recharge current.

The rectifier will sustain a short circuit at the output terminals indefinitely. The maximum short circuit current shall not exceed 105% of the rated full load current.

2.11 Power Limiting

Each rectifier module is designed to limit power output to the module specification. This enables more current to be supplied at lower output voltages, and allows matching of output to the demand of constant power loads, normally seen with telecom equipment.

This feature may also be used for a faster recharge of flooded batteries paralleled with the load.

NOTE: *Current limiting overrides the power-limiting feature.*

2.12 High Voltage Shutdown (HVSD)

This feature provides protection to the load from over voltage conditions originating from the rectifiers. It operates by shutting down the offending rectifier module when a high output voltage condition occurs. Indication is through the red Alarm (Module Fail) LED. Modules will restart automatically; however, if more than three over voltage conditions occur in one minute, the module will latch off and remain shut down until it is reset via the CXC.

2.13 Battery Eliminator Operation

Rectifier modules maintain all specifications (except where indicated) with or without a battery attached in parallel to the output; however, if a battery or another module supplying DC voltage in parallel is not present, there will be no monitoring or control activity if there is an AC power failure or input fuse failure.

3 Inspection

3.1 Packing Materials

All Argus products are shipped in rugged, double walled boxes and suspended via solid inserts to minimize shock that may occur during transportation. Packaging assemblies and methods are tested to International Safe Transit Association standards.

Products are also packaged with Cortex. This plastic wrap contains a corrosive-inhibitor that protects the product from corrosion for up to two years.

3.1.1 Returns for Service

Save the original shipping container. If the product needs to be returned for service, it should be packaged in its original shipping container. If the original container is unavailable, make sure the product is packed with at least three inches of shock-absorbing material to prevent shipping damage.

NOTE: *Argus Technologies is not responsible for damage caused by the improper packaging of returned products.*

3.2 Check for Damage

Prior to unpacking the product, note any damage to the shipping container. Unpack the product and inspect the exterior for damage. If any damage is observed contact the carrier immediately.

Continue the inspection for any internal damage. In the unlikely event of internal damage, please inform the carrier and contact Argus Technologies for advice on the impact of any damage.



Verify that you have all the necessary parts per your order for proper assembly.

4 Installation

This chapter is provided for qualified personnel to install the product, which shall be mounted in a clean and dry environment.

NOTE: *To aid the user with installation, frequent reference is made to drawings located at the rear of the manual.*

4.1 Safety Precautions



WARNING

Hazardous voltages are present at the input of power systems. The DC output from the rectifiers is classified as hazardous voltage and has a high short circuit current capacity that may cause severe burns and electrical arcing.

Before working with any live battery or power system/distribution center, the following precautions should be followed:

- Remove all metallic jewelry; e.g., watches, rings, eyeglasses, necklaces.
- Wear safety glasses with side shields at all times during installation.

Metallic tools must be insulated.

The installer should follow all applicable local rules and regulations for electrical and battery installations; e.g., CSA, UL, CEC, NEC, OSHA, and local fire codes.

4.2 Shelf Preparation/Mounting

The 19" shelf has been designed for flush mounting in a standard 19" relay rack. Universal mounting brackets allow for mid-mounting in a 19" or 23" rack. The configuration depends on the options chosen. See drawing 030-768-06.

NOTE: *The shelf shall be mounted in a clean and dry environment. Allow at least 1.75" of free space in front of the unit for unrestricted cooling airflow.*

Mounting brackets accommodate either 1" or 1-3/4" rack spacing. The shelf should be mounted to the rack using at least two #12 – 24 x 1/2" screws in each bracket. Philips-type screws and screwdriver should be used to eliminate the possibility of slippage and scratching of the unit's exterior. Washers (such as internal tooth) or special screws that are designed to cut through the painted surface should be used to ensure a good chassis ground.

4.3 Rectifier Module Insertion/Removal

Insert by placing the rectifier module on the shelf bottom and sliding the module into the rear connector (inside of the shelf). Apply pressure on the module handle to engage the rear connector in the shelf receptacle.

NOTE: *It is recommended that the first module be inserted into the front leftmost position using the side of the shelf as a guide. Subsequent modules may be inserted using the previous module as a guide.*

Tighten the screw on the bottom of the faceplate to secure the module to the shelf.

NOTE: *Do not force a module into position if it does not seat properly. All modules are keyed to ensure that the correct module (voltage/polarity) type is used.*

To remove a module, loosen the screw on the bottom of the faceplate. Grasp handle and pull out, sliding the module away from the rear connector and out of the shelf.

5 Wiring and Connections

This chapter provides cabling details and notes on cable sizing for DC applications with respect to the Argus Cordex 220-4.4kW modular switched mode rectifier.

5.1 Safety Precautions



WARNING

Hazardous AC voltages may be present. Ensure power at the AC service panel is off before attempting work on the AC connections. Use a voltmeter to verify the absence of voltage. Clearly mark the correct polarity of the battery leads before commencing work on DC connections.

Refer to the previous (Installation) chapter for additional safety precautions.

5.2 Tools Required

Various tools are essential for product installation. Use this list as a guide:

- Slot head screwdrivers (blade sizes: 1/4", 1/8", 1/16")
- Philips head screwdriver, #2 (tip size 3/16")
- Digital voltmeter equipped with test leads
- Adjustable 125/220Vdc load (optional)
- Cutters and wire strippers
- Crimping tool (optional for large gauge wire)
- Socket and ratchet set (Imperial measure).

5.3 Power System Chassis Ground and DC Ground Reference



WARNING

For safety reasons, ensure the system is properly bonded to the building's ground grid. 125/220Vdc systems are typically floating; i.e., not connected to earth ground.

Connect the chassis ground to the site ground to ensure correct operation of the system and to prevent drifting floating analog (especially current) readings.

5.4 AC Feeder Protection/Sizing

To maximize system reliability, each power module should be fed from a dedicated protection feeder breaker located at the AC distribution panel. The feeder breaker can also act as the disconnect device for the connected module. Refer to the specifications at the front of this manual for Argus recommendations.

5.5 AC Input Connections

CAUTION: AC input wires should be routed in flexible or rigid conduit as far away as possible from the DC power wires to minimize EMI disturbances.

Ensure all modules are removed from the shelf.

The wireway is designed for two customer-supplied 1" conduit fittings for AC supply located one on each side of the shelf.

Remove the metal covers (2 places) from the rear of the shelf to expose the AC input terminal blocks, L1 and L2 for each rectifier. Each terminal pair relates to an individual power module as marked.

Attach the conduit retainers to the wireway hole(s) and route the AC cables through.

Secure the wires to the AC input and chassis ground terminals as required.

Tighten the cable connector to the AC cable (conduit similar).

Replace rear cover(s) once all connections have been completed.

5.6 Calculating Output Wire Size Requirements

Wire size is calculated by first determining the appropriate maximum voltage drop requirement. Using the formula below calculate the CMA wire size requirement. Determine the size and number of conductors required to satisfy the CMA requirement.

$CMA = (A \times LF \times K) / AVD$, where:

CMA = Cross section of wire in circular MIL area

A = Ultimate drain in amps

LF = Conductor loop feet

K = 11.1 constant factor for commercial (TW type) copper wire

AVD = Allowable voltage drop

Check again that the ampacity rating of the cable meets the requirement for the installation application. Consult local electrical codes (NEC, CEC, etc.) for guidelines. If required, increase the size of the cable to meet the code.

5.7 DC Output Connections



WARNING

Leave cables or bus bars disconnected at battery and verify output polarity using a voltmeter. Make battery connections only after all other wiring is completed.

DC output wire shall be UL approved XHHW or RHH/RHW (for Canadian users, RW90 Type). Control and sense wires shall be UL approved Style 1015 (for Canadian users, TEW type).

5.7.1 Cable

Terminate cable leads with appropriate crimp lugs for 3/8" holes on 1" centers.

Secure the positive and negative to the shelf output post of the correct polarity; i.e., +V_{cable} to +V_{post}. Ensure the washers are on the bolts in the same order in which they were shipped from the factory. Tighten the bolts as per Customer Connections drawing at the rear of this manual.

5.7.2 Bus Bar

Bus bar adapters may be factory-installed, for the option selected, to easily accommodate direct connections to customers' vertical bus bars.

Secure the positive and negative to the shelf output post of the correct polarity; i.e., +V_{cable} to +V_{post}. Ensure the washers are on the bolts in the same order in which they were shipped from the factory. Tighten the bolts as per Customer Connections drawing at the rear of this manual.

5.8 CAN Serial Ports

Two CAN Serial ports (modular jacks with offset latches), are provided for communications with Argus' Cordex rectifiers and other CAN-enabled equipment. These are located on the left side of the shelf (as viewed from the front).

Daisy-chain from shelf to shelf (CAN OUT of one shelf to CAN IN of another) as necessary and ensure that only the last shelf is terminated. See Figure 2.

5.8.1 CAN Termination

A jumper (or switch depending on your configuration) allows setting of the CAN OUT to be open (to the next shelf in the system) or terminated. Termination must be enabled in final shelf on the CAN bus only. Access termination selection (inside the shelf) by removing the leftmost rectifier #1 (MDL 1).

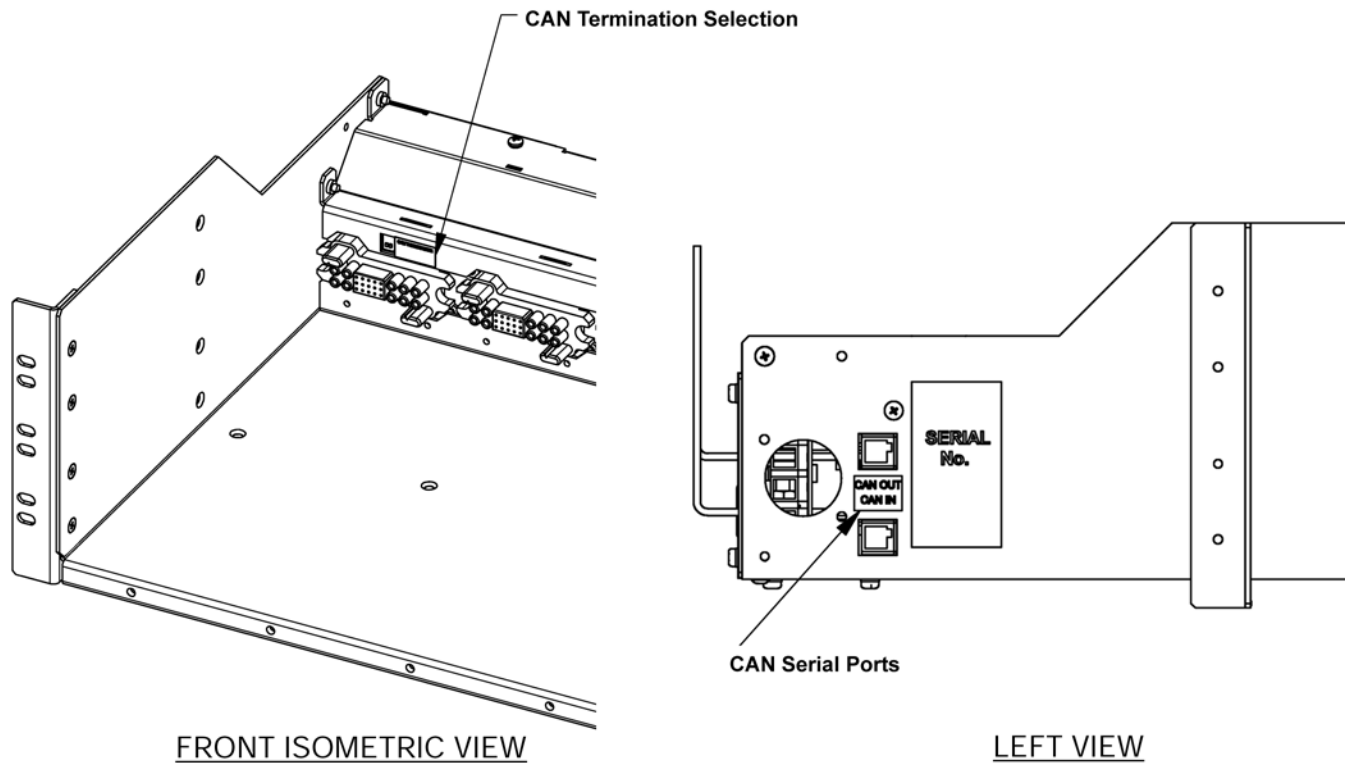


Figure 2–CAN serial ports and termination selection

6 Operation

6.1 Main Rectifier States

Rectifier operation can be broken up into five main states:

1. Off,
2. Start delay,
3. Soft start,
4. Normal operation,
5. Turning off.

Each state is characterized as being distinct and necessary for the operation of the rectifier. These states are briefly described below.

6.1.1 Off State

The rectifier will be in the Off state immediately after power is applied to the rectifier or after a rectifier shutdown. The shutdown source may be remote or local shutdown, AC shutdown, OVP or thermal shutdown.

When the rectifier is in this state the DC-DC converter is turned off and the CXC will be monitoring its inputs for the proper conditions to begin the start up sequence.

When the conditions have been met for the rectifier to start up, it will transition to the Start Delay state.

6.1.2 Start Delay State

When the rectifier is in the Start Delay state, the DC-DC converter is held off and still not sourcing power and is waiting for a given amount of time before transitioning to the next state.

When in this state, the CXC continues to monitor its inputs.

After the Start Delay state the rectifier will transition to the Soft Start state.

NOTE: *Soft start, or current walk-in, gradually increases the voltage and current output of the rectifier upon startup. This is done to reduce the instantaneous load on the AC source.*

6.1.3 Soft Start State

When the Soft Start state is entered, the rectifier will be turned on and the output voltage and output current will be gradually increased. If a load is present, the rectifier will begin to source power.

When the voltage and current limit ramps have finished, the rectifier will transition to the Normal Operation state.

6.1.4 Normal Operation State

The Normal Operation state is the state that the rectifier will be in performing all of the rectifier functions and features specified herein.

From this state, the only valid transition is to the Turning Off state. This transition will happen if the rectifier is required to shutdown.

6.1.5 Turning Off State

The Turning Off state is entered because a short delay is required before the rectifier actually turns off to take care of any initialization requirements.

When this short delay has elapsed, a transition to the Off state is made.

6.2 Main Rectifier Modes

In addition to Main Rectifier States, there is a set of Main Rectifier Modes. These modes can be divided into two categories as follows:

6.2.1 Output Voltage Modes

Voltage modes can be thought of as modes that, under software control, can directly adjust the output voltage. The qualification of 'under software control' is made because there are processes that occur in the rectifier that can change the output voltage that do not adjust the output voltage directly (such as the rectifier being in current limit).

The following table lists the five Output Voltage Modes and a description of when they are active:

Output Voltage Modes	Active when...
Float	Output voltage is set to the float voltage setting.
Equalize	Output voltage is set to the equalize voltage setting.
Battery Test	Output voltage is set to the battery test voltage setting.
Safe	Output voltage is set to the safe mode voltage setting.
Manual Test	Output voltage can be manually adjusted outside of the standard adjustment ranges.

Table A—Output voltage modes

6.2.2 Output Current/Power Modes

These modes directly affect the output current and power.

The following table lists the four Output Current/Power Modes and a description of when they are active:

Output Current/Power Mode	Active when...
Temperature foldback mode	Output current and power limit have been reduced due to high temperature of the heatsink or internal ambient temperature sensor.
AC foldback mode	Output current and power limit have been reduced due to low AC input voltage. <i>Note: this will reduce the risk of tripping an AC breaker due to increased AC current draw as the AC voltage decreases.</i>
Short circuit foldback mode	Output current limit has been reduced due to a short circuit at the output.
Internal fault foldback mode	Output current limit has been reduced due to an internal fault.

Table B—Output current/power modes

6.3 Can Bus Communications

The CAN bus is used for communication between the rectifier and CXC.

The communication between the rectifier and CXC consists of commands and data transfer that are used during the operation of the power system to configure the rectifier with system settings and to monitor rectifier status.

6.4 Factory Ranges and Defaults

The following tables lists the rectifier settings/ranges/defaults; changes are made via the CXC:

Setting	Range (minimum to maximum)	Default
Float (FL) Voltage	180 – 320V	229.5V
Equalize (EQ) Voltage	180 – 320V	239.7V
Battery Test (BT) Voltage	180 – 320V	195.5V
OVP	See note below – 325V	253V
Current Limit (CL)	9 – 100%	100%
Power Limit (PL)	0 – 100%	100%
Module Start Delay	0 – 250s	1s
System Start Delay	0 – 600s	0s
Low Voltage Alarm (LVA)	180 – 320V	187V
High Voltage Alarm (HVA)	180 – 320V	244.8V
EQ Timeout	1 – 2399h	30h
BT Timeout	1 – 250h	8h
Softstart Ramp-rate	Normal/Fast	Normal
CL/PL Alarm	Enable/Disable	Enable
Remote Shutdown	Enable/Disable	Enable
Ramp Test	Enable/Disable	Enable

Table C–Cordex 220-4.4kW factory ranges and defaults

NOTE: OVP cannot be set below the present system/FL/EQ/BT voltage setting or the safe mode voltage of 218.5V.

7 System Startup

After completing the shelf wiring and installation, perform the following startup and test procedure to ensure proper operation:

7.1 Check System Connections

- Ensure AC is off, battery is disconnected, and all power modules are removed from the shelf.
- Triple check the polarity of all connections.

7.2 Verify AC and Power the Shelf

- Install one power module.
- Verify AC input voltage is correct and turn on the corresponding AC input feeder breaker.
- The power module OK LED should illuminate after a preset start delay.
- Using the CXC, test functionality of various module alarms and controls.

7.3 Check Battery Polarity and Connect

- Verify correct battery polarity using a voltmeter (ensuring no cells or batteries are reversed).
- Connect battery as required to the output of the system or turn on battery breaker.
- Install remaining power modules.
- In the adjustments menu of the CXC, set Float and Equalize voltage to the levels specified by the battery manufacturer.
- Using the CXC, test functionality of various module alarms and controls. In addition, perform a load test with the system using a resistive load box as needed.

7.4 CXC Reset

The reset button located on the front panel of the optional CXC is for restarting the microprocessor. When pressed momentarily, the unit beeps twice then resets. The front-panel LED's will illuminate temporarily, but will extinguish after the system has finished its 15-second self-test.

8 Maintenance

Although very little maintenance is required with Argus systems, routine checks and adjustments are recommended to ensure optimum system performance. Qualified service personnel should do repairs.

The following table lists a few maintenance procedures for this system. These procedures should be performed at least once a year.



WARNING: HIGH VOLTAGE AND SHOCK HAZARD.

Use extreme care when working inside the shelf while the system is energized. Do not make contact with live components or parts.

Circuit cards, including RAM chips, can be damaged by static electricity. Always wear a grounded wrist strap when handling or installing circuit cards.

Procedure	Date Completed
Clean ventilation openings	
Inspect all system connections (re-torque as necessary)	
Verify alarm/control settings	
Verify alarm relay operation	

Table D–Sample maintenance log

Rectifiers could fail due to lack of maintenance and should be checked frequently until a proper maintenance schedule is developed to suit site conditions.

8.1 Fan Replacement



Figure 3–Fan replacement

1. Shut off the unit and unscrew the front fastener that secures the power module to the shelf.
2. Slide the module 10 cm (4") out of the shelf and wait two minutes for module capacitors to discharge.
3. Remove the four screws (two each side) that secure the front panel to the module chassis.
4. Slide the front panel out.
5. Disconnect the fan power lead wires (one set per fan) and front panel ribbon cable from the module.
6. Remove the screws that secure the fans to the front panel.
7. Note the direction of airflow and remove the fans from the front panel.
8. Install the replacement fans following the preceding steps in reverse order.

8.2 MOV Replacement

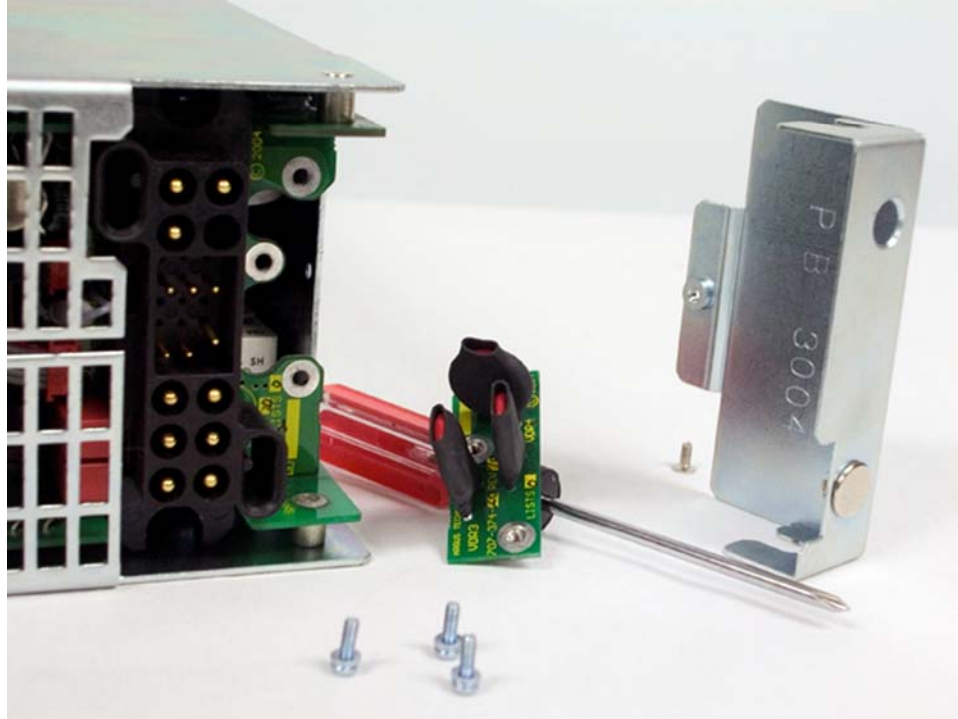


Figure 4–MOV replacement

The MOVs (metal oxide varistor) are used to protect the power modules from power line surges and the surges caused by lightning strikes. High capacity surges may permanently damage MOVs but they are easily replaced in the field using the following procedure:

1. Shut off the unit and unscrew the front fastener that secures the power module to the shelf.
2. Slide the module 10 cm (4") out of the shelf and wait two minutes for module capacitors to discharge.
3. Turn the module around to face the back of the unit and remove the one screw (module bottom toward the rear) securing the MOV cover.
4. Remove the cover and locate the MOV printed circuit board (PCB).
5. Remove the three screws that secure the MOV PCB.
6. Decontaminate the area and unit with flux remover or a similar cleaning compound. This is to remove any metallic particles or carbon, which may have been deposited when the MOV failed.
7. Install the replacement MOV PCB following the preceding steps in reverse order.

9 Argus Conventions

9.1 Numbering System

Argus Technologies uses an eight-digit drawing number system, which is broken into three blocks. The first three digits describe the category of the product; e.g., rectifier or fuse panel. The next three digits indicate the sequence in which the product number was allocated in a particular category. The last two digits indicate the type of drawing, for example:


- “-06” Outline Drawing
- “-08” Customer Connections
- “-20” Main Assembly

Argus uses an eight-digit part numbering system for all components and sub assemblies. Each part is covered by its own unique number. Due to the quantity, categories will not be listed within this manual.


9.2 Acronyms and Definitions

AC	Alternating current
ANSI	American National Standards Institute
AWG	American Wire Gauge
BTU	British thermal unit
CAN	Controller area network
CEC	Canadian Electrical Code
CSA	Canadian Standards Association
CX	Cordex™ series; e.g., CXC for <u>C</u> ordex <u>S</u> ystem <u>C</u> ontroller
DC	Direct current
DHCP	Dynamic Host Configuration Protocol
EIA	Electronic Industries Alliance
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
ERM	<u>E</u> lectromagnetic <u>C</u> ompatibilty and <u>R</u> adio <u>S</u> pectrum <u>M</u> atters
ESD	<u>E</u> lectrostatic <u>D</u> ischarge
FCC	Federal Communications Commission (for the USA)
HVSD	<u>H</u> igh <u>v</u> oltage <u>s</u> hutdown
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronics Engineers
IP	Internet Protocol
LED	Light emitting diode
LVD	Low voltage disconnect
MOV	Metal oxide varistor
MTBF	Mean time between failures
NC	Normally closed
NEC	National Electrical Code (for the USA)
NO	Normally open
OSHA	Occupational Safety & Health Administration
OVP	Over voltage protection
RAM	Random access memory
RU	Rack unit (1.75”)
TCP/IP	Transmission Control Protocol / Internet Protocol
THD	Total harmonic distortion
UL	Underwriters Laboratories


REVISIONS			
LR	DESCRIPTION	REV BY	DATE
5	ADDED MOD-MOUNT OPTIONS	S.D.W.	2007/01
		APPD	

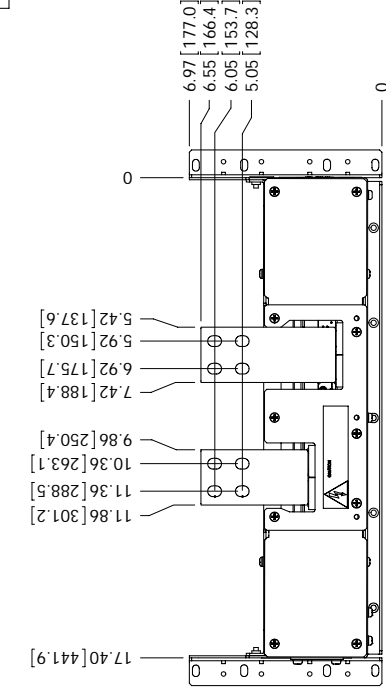


REAR VIEW
MODULES ARE HIDDEN

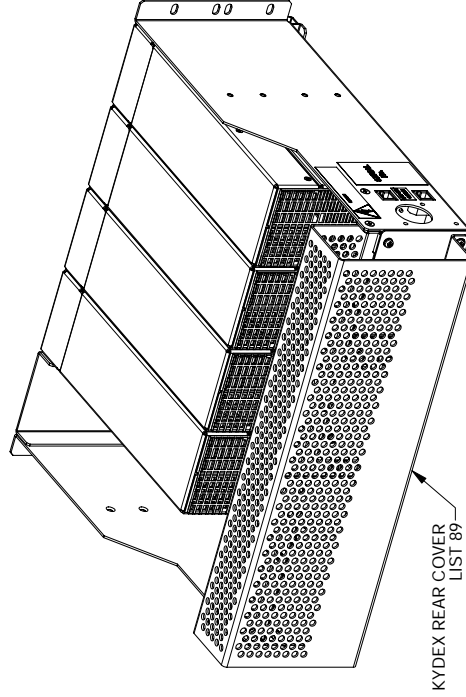

REAR VIEW

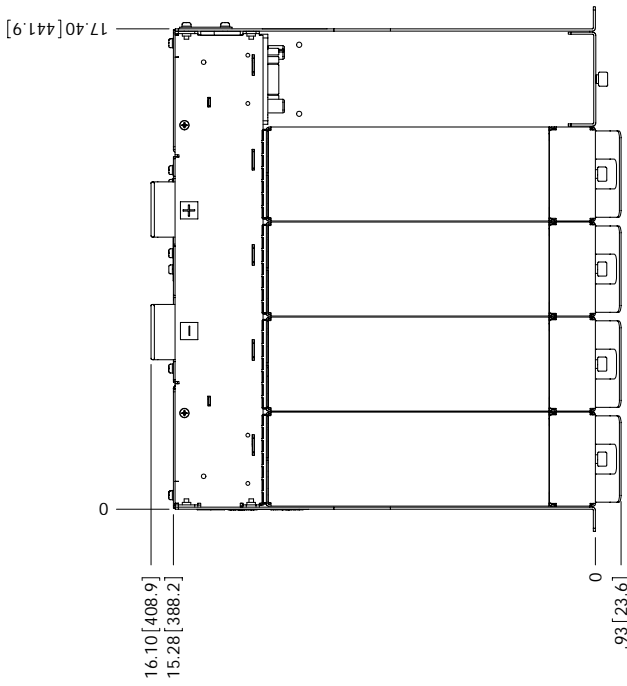


TOP VIEW

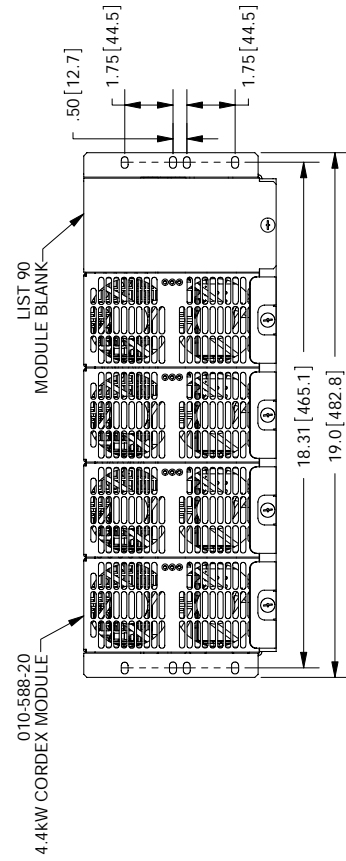


FRONT VIEW

		<small>RESERVED AND SPECIFICATIONS ARE THE PROPERTY OF ARGUS TECHNOLOGIES AND SHALL NOT BE COPIED OR USED WITHOUT PERMISSION FROM ARGUS TECHNOLOGIES</small>	
		DESIGN	DATE
DRAWN	2006/05	CHECKED	2006/05
APPROVED	G.S.	FINISH	2006/05
<small>TOLERANCES</small> .XX ±.010" .XXX ±.015" .XXXX ±.020"		<small>PER P.O. and Doc: 010-024-83</small>	
<small>SCALE</small>		<small>N.T.S.</small>	
<small>TITLE</small>			
OUTLINE, 19" SHELF 4.4kW CORDEX			
<small>ISSUE DATE</small>		<small>SHEET 1 OF 2</small>	
<small>SIZE TYPE DWG NO.</small>		<small>REV</small>	
B D2		030-768-06 B	


© 2006 ARGUS TECHNOLOGIES
DIMENSIONS ARE IN INCHES WITH METRIC [mm] IN BRACKETS [mm]

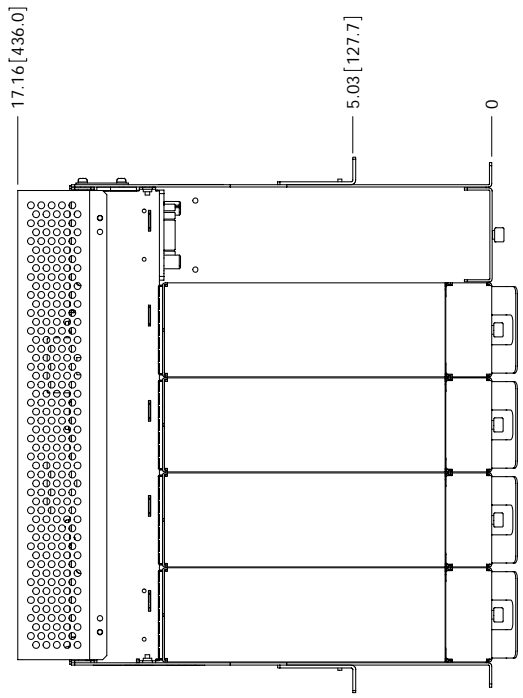


TOP VIEW LIST 19 - 19" MID MOUNT

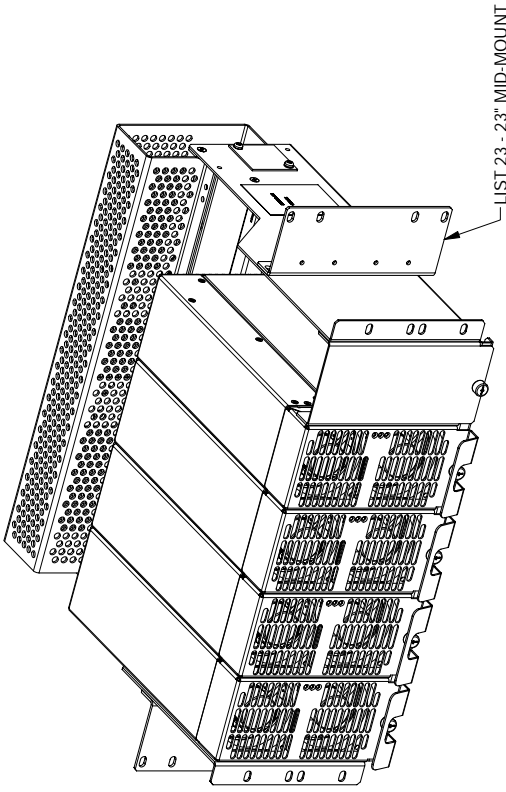

LIST 23 - 23" MID-MOUNT

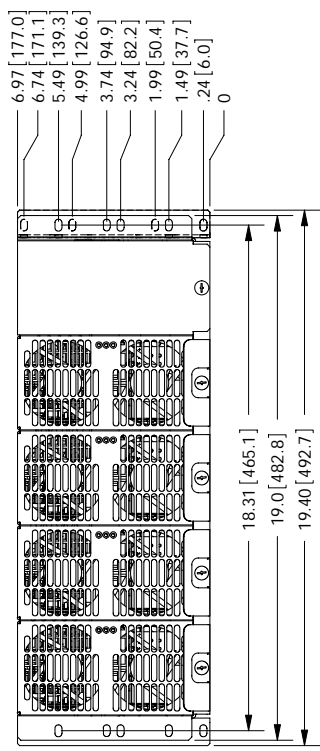

FRONT VIEW LIST 19 - 19" MID MOUNT

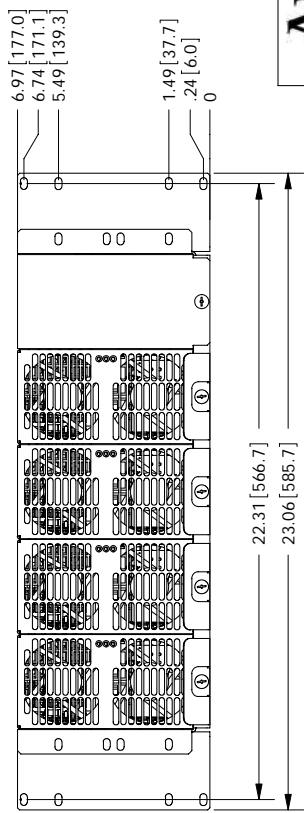


FRONT VIEW LIST 23 - 23" MID MOUNT

		ISSUE	SHEET	2 OF 2
		DATE	REV	
<small>ARGUS TECHNOLOGIES AND ITS PRODUCTS ARE THE PROPERTY OF ARGUS TECHNOLOGIES. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN CONSENT OF ARGUS TECHNOLOGIES.</small>				
TITLE	SCALE	N.T.S.		
OUTLINE, 19" SHELF				
4.4KW CORDEX				
SIZE	TYPE	DWG NO.		
B	DZ			
© 2006 ARGUS TECHNOLOGIES				
DIMENSIONS ARE IN INCHES WITH METRIC (mm) IN BRACKETS: INCHES [mm]				
			030-768-00 [B]	

© 2006 ARGUS TECHNOLOGIES
 DIMENSIONS ARE IN INCHES WITH METRIC (mm) IN BRACKETS: INCHES [mm]
 030-768-00 [B]



REV	DESCRIPTION	REV BY	DATE	APPD

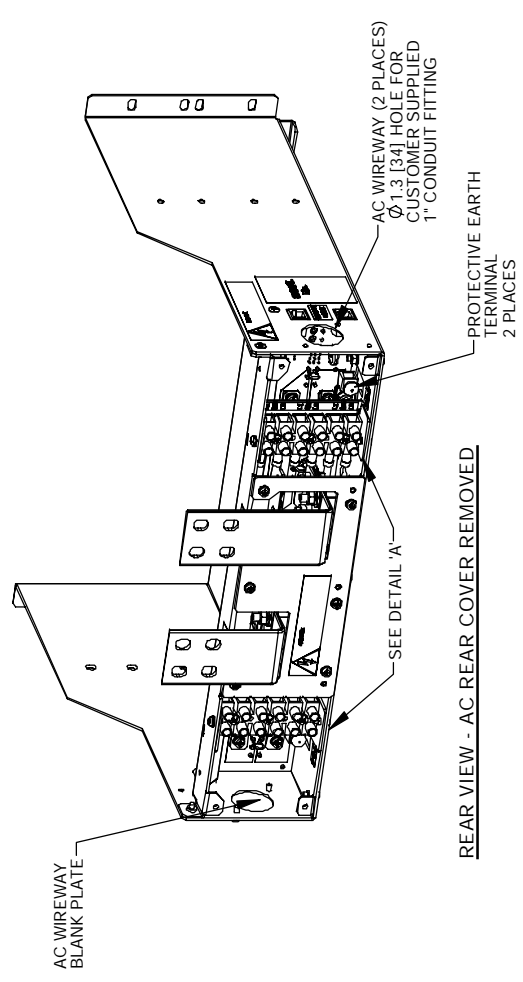

REAR VIEW - AC REAR COVER REMOVED

DETAIL 'A' - AC INPUT

SINGLE PHASE INPUTS, 208V - 277VAC

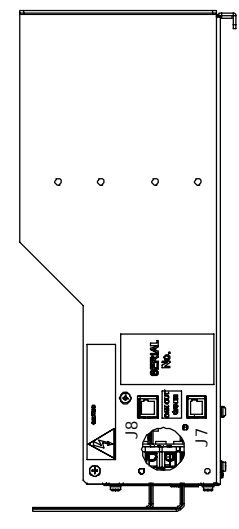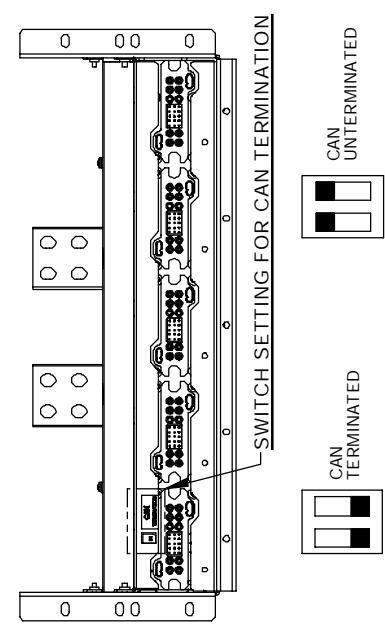

CAN OUT RJ12 OFFSET
PIN OUT (J8)

- 1. GND
- 2. CAN H
- 3. NOT CONNECTED
- 4. CAN L
- 5. NOT CONNECTED
- 6. NOT CONNECTED

CAN IN RJ12 OFFSET
PIN OUT (J7)

- 1. GND
- 2. CAN H
- 3. NOT CONNECTED
- 4. CAN L
- 5. NOT CONNECTED
- 6. NOT CONNECTED


© 2006 ARGUS TECHNOLOGIES

DIMENSIONS ARE IN INCHES WITH METRIC (mm) IN BRACKETS. INCHES (mm)


THESE DESIGN AND SPECIFICATIONS ARE THE PROPERTY OF ARGUS TECHNOLOGIES AND SHALL NOT BE COPIED OR REPRODUCED WITHOUT THE WRITTEN PERMISSION OF ARGUS TECHNOLOGIES.

DESIGN	WHL	200605	MATERIAL
DRAWN	JUL	200605	
CHECKED		200605	
APPROVED		200605	FINISH
TOLERANCES: IN: PER P.O. and Doc: 070-004-83			
XX: ±0.1 mm			
XXX: ±0.075 mm			
XXXX: ±0.075 mm			
SCALE: N.T.S.			
TITLE: CUSTOMER CONNECTION 19" SHELF, 4.4KW CORDEX			
ISSUE	DATE	SHEET	1 OF 2
B	DZ	030-768-08 A	


REV	DESCRIPTION	REV BY	DATE	APPD

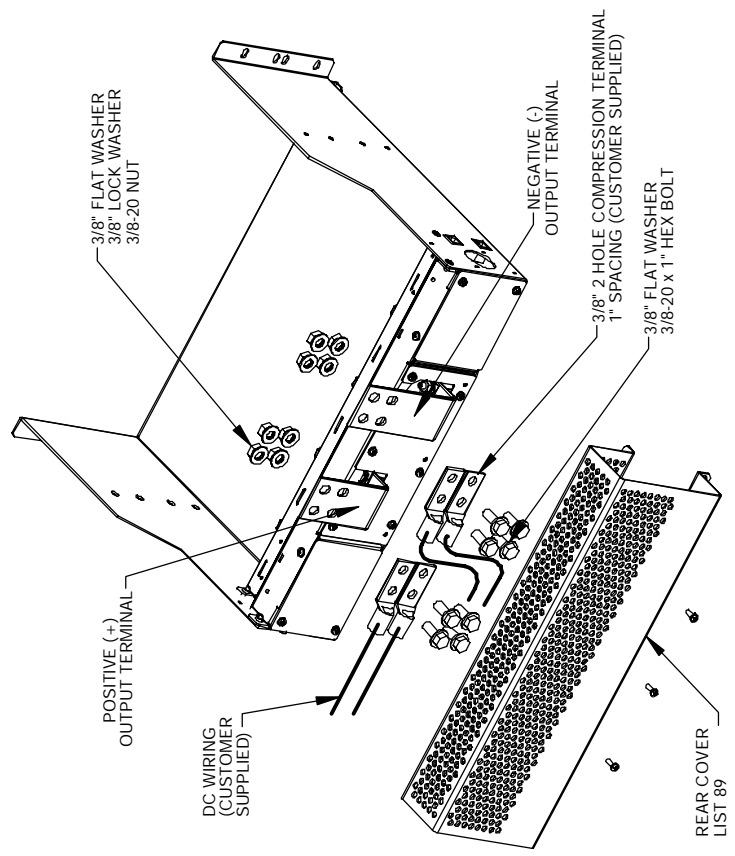

REAR ISOMETRIC VIEW - DC CABLE INSTALLATION

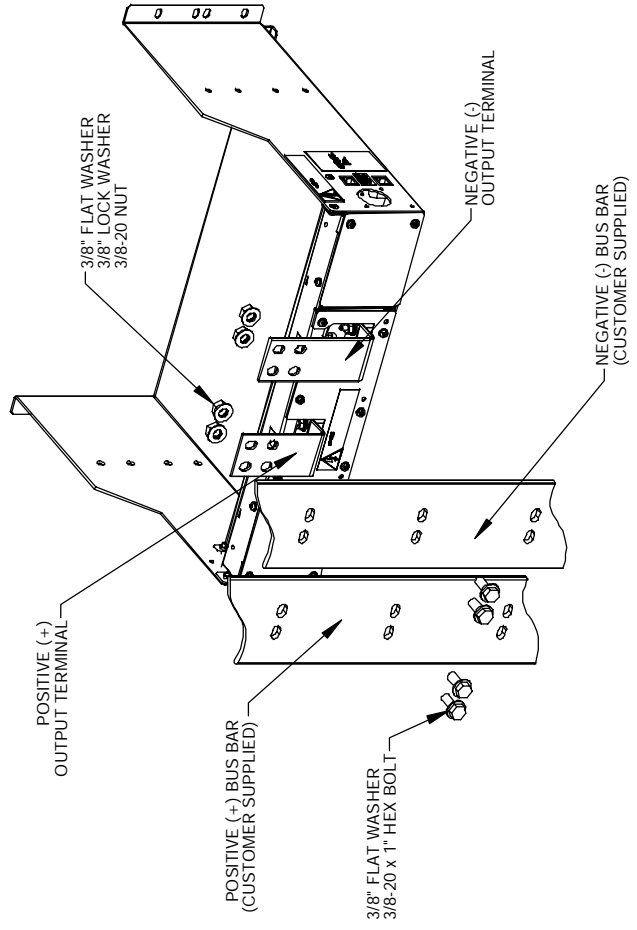

REAR ISOMETRIC VIEW - BUS BAR INSTALLATION

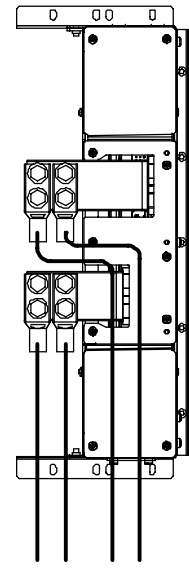

REAR VIEW - DC CABLE INSTALLATION
REAR COVER NOT SHOWN

ARGUS	
THESE DESIGNS AND SPECIFICATIONS ARE THE PROPERTY OF ARGUS TECHNOLOGIES. NO PARTS MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, WITHOUT ITS WRITTEN CONSENT.	
MATERIAL SIZE SHEET 1	SCALE N.T.S.
TITLE CUSTOMER CONNECTION 19" SHELF, 4.4KW CORDEX	
ISSUE DATE	SHEET 2 OF 2
SIZE TYPE DWG NO.	REV
B DZ	030-768-08 A

© 2006 ARGUS TECHNOLOGIES

DIMENSIONS ARE IN INCHES WITH METRIC (mm) IN BRACKETS; INCHES [mm]

SPARE PARTS LIST

POWER MODULE, CORDEX CXRF 220-4.4kW 208-240VAC

APPROVED: _____

ISSUED: _____

ITEM	QTY	PART NO.	REV	DESCRIPTION	CIRCUIT DESIGNATION OR REMARKS
------	-----	----------	-----	-------------	-----------------------------------

List 0; ON SITE:

1	2	747-212-20 List 0		Assy, Fan, Cordex 24-3.1kW	Fn100,101
2	1	707-374-20 List 0		Assy, PCB, Trans Protn, Cordex 3.6kW	(A8)

FACTORY SERVICE INFORMATION

Technical Support

Technical support staff are available for answering general questions related to installation, operation and maintenance of Argus products. In Canada and the USA, call Argus toll free 7:30 am to 5:00 pm Pacific Standard Time at:

+1-888 GO ARGUS

(+1-888-462-7487)

For emergencies, call +1-888-GO-ARGUS 24 hours a day, seven days a week.
Customers outside Canada and the USA, call +1-604-436-5547 for technical support.

Training

Argus offers various levels of product and technical training. These workshops provide a mix of theory and hands on application for qualified customers. Please consult your sales representative for course schedules, locations and costs, or visit our website at www.argusdcpower.com.

Factory Repair and Servicing

All service, beyond initial adjustments, should be carried out by qualified factory service personnel. For these procedures, please contact Argus Technologies at the locations listed to the right.

Product Returns

Before returning any product for service, please obtain a Return Material Authorization (RMA) number from an Argus factory service representative. The representative will require the model and serial number, as well as a brief description of the problem prior to issuing the RMA number. All material must be pre-authorized before being returned.

See document 048-507-10 "Warranty and Repair Information" for more details.

Moving and Storage

Units must be suitably packed in the original shipping container (or equivalent) prior to re-shipping. The box should be completely enclosed and constructed of wood or double-wall, corrugated cardboard. At least 3" of foam or shock absorbing packing material must surround the unit.

Factory Service Centers

Canada and International

Argus Technologies Ltd.
ATTN: RMA Returns
7033 Antrim Avenue
Burnaby, BC, V5J 4M5 Canada
Tel: +1 604 436 5900
Fax: +1 604 436 1233
Email: returns@argusdcpower.com

USA

Argus Technologies Inc.
ATTN: RMA Returns
3116 Mercer Avenue
Bellingham, WA, 98225 USA
Tel: +1-360 756 4904
Fax: +1-360 647 0498
Email: returns-usa@argusdcpower.com

Asia-Pacific

PCM Electronics (Dong Guan) Co., Ltd.
Hongli Industrial Area, Miaobian, Liaobu Town,
Dongguan City, Guangdong Province,
523400 China
Tel: +86 755 8895 3310
Fax: +86 755 8895 3307

Authorized Service Center

Argentina

Argus Technologies de Argentina
Belen 315, Capital Federal, Buenos Aires,
14071 Argentina
Tel: +54 (11) 4672 4821
Fax: +54 (11) 4504 4698
Cell: +54 9 (11) 4993 9996
Email: ikleiman@argus.ca

Asia

Argus Technologies Asia Pte Ltd
Blk 6 Tagore Lane #160
Singapore 787570
Tel: +65 6458 8900
Fax: +65 6458 2122

Australia

CPS National
8/376 Newbridge Rd
Moorebank, NSW, 2170 Australia
Tel: +61 02 9822 8977
Fax: +61 02 9822 8077

Australia/New Zealand

Alpha Power Systems Pty Ltd
Unit 3, 30 Heathcote Road
Moorebank, NSW, 2170 Australia
Tel: +61 02 9602 8331
Fax: +61 02 9602 9180

Century Yuasa

37 - 65 Colbalt Street
Carole Park QLD 4300
Australian Sales & Service
Tel: +61 07 3361 6587
Fax: +61 07 3361 6705
New Zealand Sales & Service
Tel: +64 9 978 6689
Fax: +64 9 978 6677

Canada

Compower Systems Inc.
118 Tiffield Road
Toronto, ON, M1V 5N2 Canada
Tel: +1 416 293 3088
Fax: +1 416 293 0671

Europe

Alpha Technologies Europe Ltd.
Cartel Business Estate
Edinburgh Way
Harlow, Essex, CM20 2DU UK
Tel: +44 1279 422110
Fax: +44 1279 423355

Mexico & Central America

Technologies Argus First De Mexico SA de CV
Anatole France No. 17
Col. Polanco
Mexico City, 11560 Mexico
Tel: +52 55 5280 6990
Fax: +52 55 5280 6585

South America

Argus Technologies Argentina
Santo Tome 2573, Capital Federal
Buenos Aires, 1416 Argentina
Tel: +54 11 4504 4698
Cell: +54 9 11 4993 9996
E-pager: 541149939996@nextel.net.ar

Turkey

IPC Enerji Elk San ve TIC AS
Inonu cad. Kanarya sok. No:20
Yenisahra - Kadikoy
Istanbul, Turkey
Tel: +90 216 317 41 42
Fax: +90 216 472 90 66